


A2 - FURRED-IN INSTALLATION

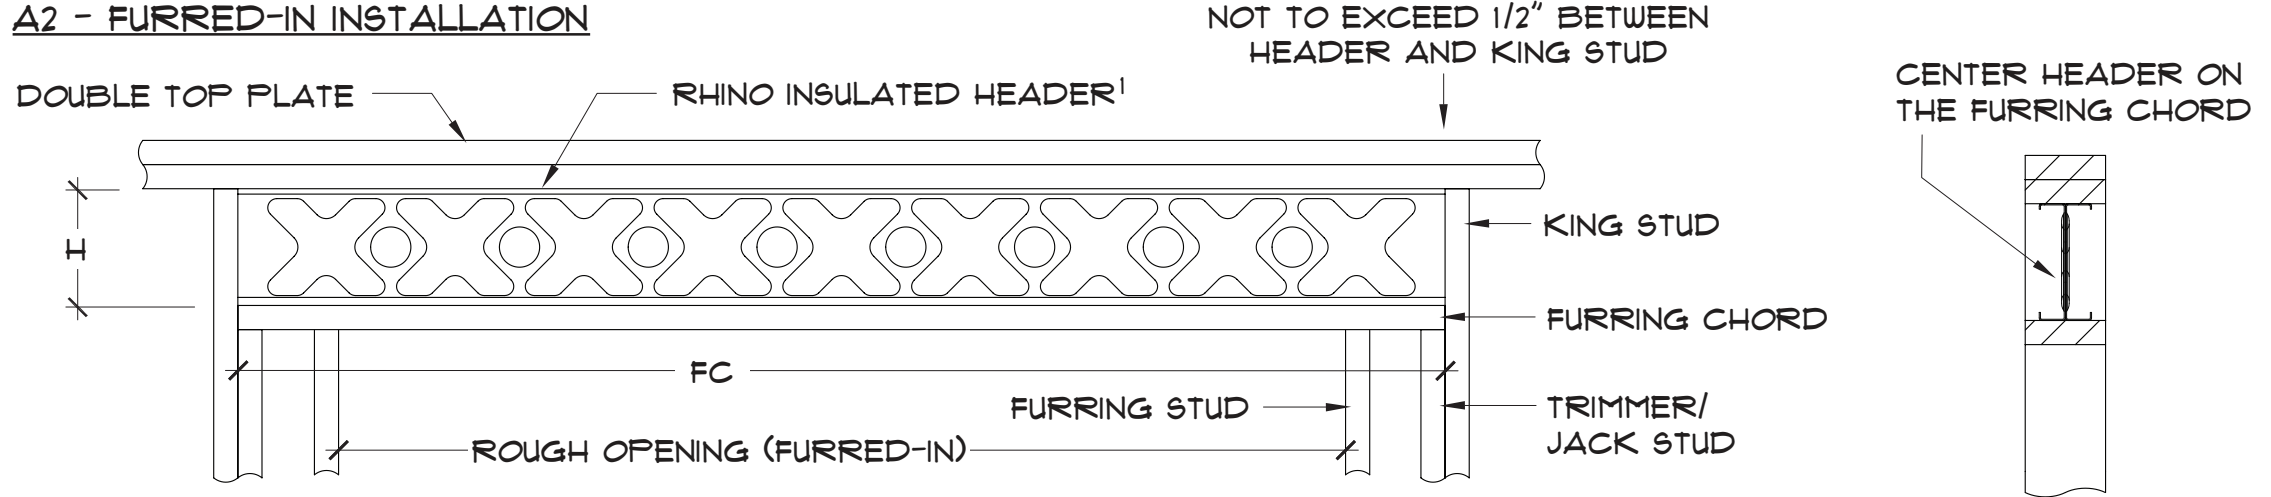

1. SECURE HEADER WITH $\emptyset.148"$ X 1.5" MIN. COMMON JOIST HANGER NAILS, USING A SINGLE NAIL EVERY 12" O.C. ON THE TOP PLATE AND EVERY 6" O.C. ON THE BOTTOM FURRING CHORD (FILLING ALL NAIL HOLES NOT REQUIRED).