


A3 - UNDERHANG INSTALLATION

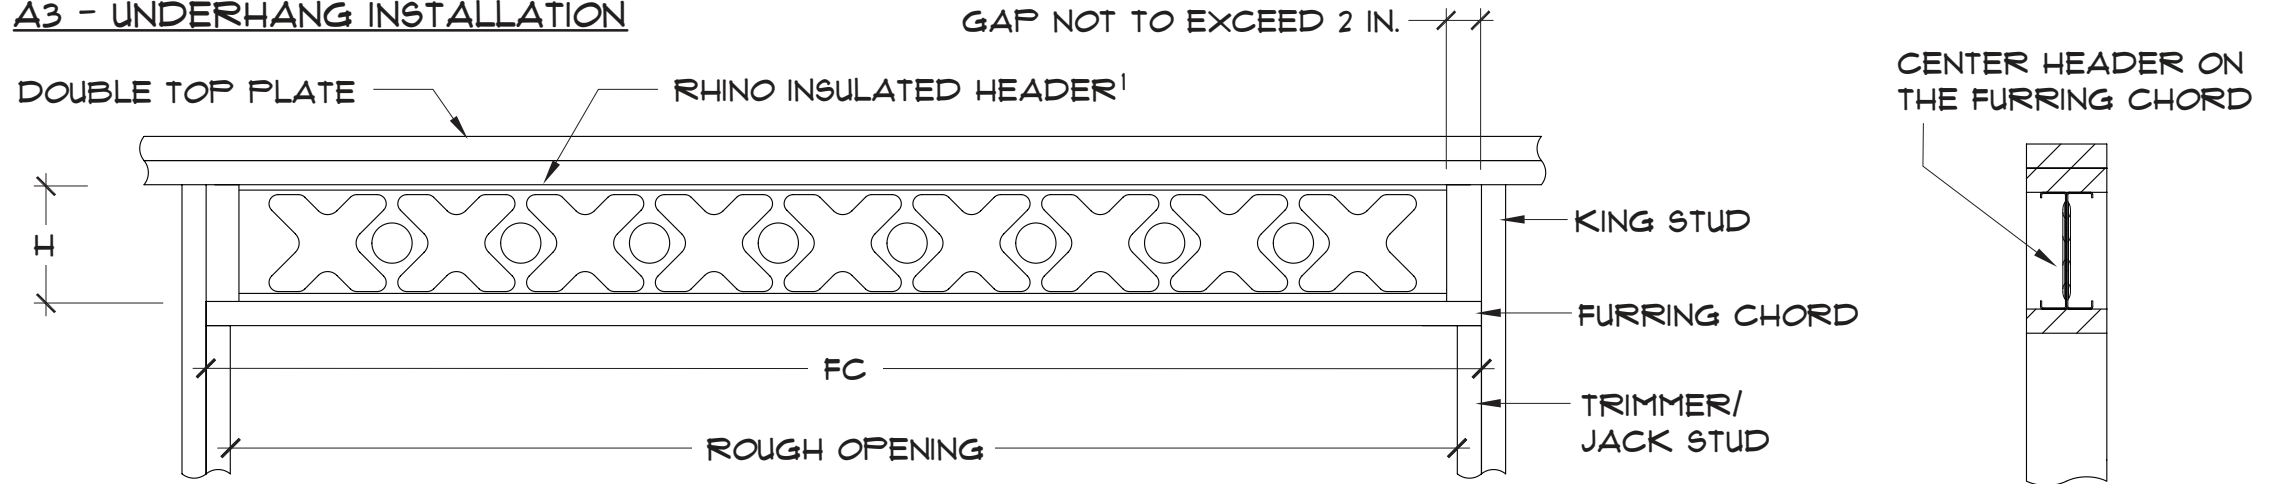

1. SECURE HEADER WITH 10d x 1.5 TICO OR COMMON JOIST HANGER NAILS (OR BETTER), USING A SINGLE NAIL EVERY 12" O.C. ON THE TOP PLATE AND EVERY 6" O.C. ON THE BOTTOM FURRING CHORD (FILLING ALL NAIL HOLES NOT REQUIRED).